



| | Descrizione • Description | Codice • Code |
|---|--|---------------|
|  | <p>Telecomando CROSS 1 canale. Frequenza radio 433,90 Mhz. Compatibile con motori CROSS, CROSS BOX e Radio GSM</p> <p><i>CROSS 1 channel remote control. Radio Frequency 433.90 Mhz. Compatible with CROSS, CROSS BOX and GSM Radio motors</i></p> | 60090136 |
|  | <p>Telecomando CROSS 15 canali. Frequenza radio 433,90 Mhz. Compatibile con motori CROSS, CROSS BOX e Radio GSM</p> <p><i>CROSS 15 channels remote control. Radio Frequency 433.90 Mhz. Compatible with CROSS, CROSS BOX and GSM Radio motors</i></p> | 60090137 |
|  | <p>Telecomando CROSS a parete 1 canale. Frequenza radio 433,90 Mhz. Compatibile con motori CROSS, CROSS BOX e Radio GSM</p> <p><i>CROSS 1 channel wall transmitter. Radio Frequency 433.90 Mhz. Compatible with CROSS, CROSS BOX and GSM Radio motors</i></p> | 60090138 |
|  | <p>Telecomando CROSS a parete 15 canali. Frequenza radio 433,90 Mhz. Compatibile con motori CROSS, CROSS BOX e Radio GSM</p> <p><i>CROSS 15 channels wall transmitter. Radio Frequency 433.90 Mhz. Compatible with CROSS, CROSS BOX and GSM Radio motors</i></p> | 60090139 |
|   | <p>Programmatore orario CROSS a parete. Frequenza radio 433,90 Mhz. Compatibile con motori CROSS, CROSS BOX e Radio GSM</p> <p><i>CROSS clocked transmitter. Radio Frequency 433.90 Mhz. Compatible with CROSS, CROSS BOX and GSM Radio motors</i></p> | 60090140 |
|  | <p>Telecomando MINI. Frequenza radio 433,90 Mhz. Compatibile con motori CROSS, CROSS BOX e Radio GSM</p> <p><i>MINI keychain transmitter. Radio Frequency 433.90 Mhz. Compatible with CROSS, CROSS BOX and GSM Radio motors</i></p> | 60090145 |

| | Descrizione • Description | Codice • Code |
|---|---|---|
|  | <p>Sensore Sole-Vento CROSS. Alimentazione 230 V / 50 Hz. Frequenza radio 433,90 Mhz. Compatibile con motori CROSS, CROSS BOX e Radio GSM</p> <p><i>CROSS Sun and Wind sensor. Power 230V / 50Hz. Radio Frequency 433.90 Mhz. Compatible with CROSS, CROSS BOX and GSM Radio motors</i></p> | <p>60090141</p> |
|  | <p>Ricevitore esterno CROSS. Frequenza radio 433,90 Mhz. Alimentazione 230 V / 50 Hz.</p> <p><i>CROSS external receiver. Radio Frequency 433.90 Mhz. Power 230V / 50Hz.</i></p> | <p>Si prega di contattare il Servizio Clienti <i>Please, check with Customer Service Department</i></p> |
|  <p>Imagen Provisional • Provisional Image</p> | <p>Ricevitore esterno CROSS. Frequenza radio 433,90 Mhz. Alimentazione 120 V / 60 Hz.</p> <p><i>CROSS external receiver. Radio Frequency 433.90 Mhz. Power 120V / 60Hz.</i></p> | <p>Si prega di contattare il Servizio Clienti <i>Please, check with Customer Service Department</i></p> |
|  | <p>Ricevitore CROSS per Fianchi Cassonetto. Frequenza radio 433,90 Mhz. Alimentazione 230 V / 50 Hz.</p> <p><i>CROSS end cap receiver. Radio Frequency 433.90 Mhz. Power 230V / 50Hz.</i></p> | <p>Si prega di contattare il Servizio Clienti <i>Please, check with Customer Service Department</i></p> |
|  <p>Imagen Provisional • Provisional Image</p> | <p>Ricevitore CROSS per Fianchi Cassonetto. Frequenza radio 433,90 Mhz. Alimentazione 120 V / 60 Hz.</p> <p><i>CROSS end cap receiver. Radio Frequency 433.90 Mhz. Power 120V / 60Hz.</i></p> | <p>Si prega di contattare il Servizio Clienti <i>Please, check with Customer Service Department</i></p> |
| | | |